



INFORMATION

Using your AWAC Generation 2

Below you will find some useful information about how to get started using your AWAC instrument. You will find links to the configuration software and details about where to find more comprehensive information about the product. If something is missing or unclear, please contact your local Nortek representative.

Nortek Deployment software

A web-based application called Nortek Deployment is used to operate and configure the Generation 2 AWACs. This software can be launched from your web browser by visiting deployment.nortekgroup.com, but can also be installed from Microsoft Store or downloaded as an offline installer file.

Guides and manuals

A comprehensive help guide and details on how to operate and configure your instrument is found in the Nortek Deployment software wizard. The software also has a support section where you can search for relevant FAQ.

In addition to the help sections in the software, the following relevant manuals are available in PDF on our support site:

- Integrator's Guide
- Principles of Operation - Currents
- Principle of Operation - Waves

What's new?

Full details about the updates made to the Generation 2 AWACs can be found in the release notes here:

<https://www.nortekgroup.com/knowledge-center/wiki/aquadopp-awac-release-notes>

 
Connecting to the software

Connect the instrument (via ethernet) to your computer using the supplied ethernet cable. Make sure the instrument is powered using the external power supply.


How to connect to your instrument is described step-by-step in the Nortek deployment software help wizard under the **Connection** tab



If you need to plan your deployment without being connected to an instrument, you can do so in the software by connecting to a **virtual instrument**



Once you've completed all the steps, the instrument should be connected.

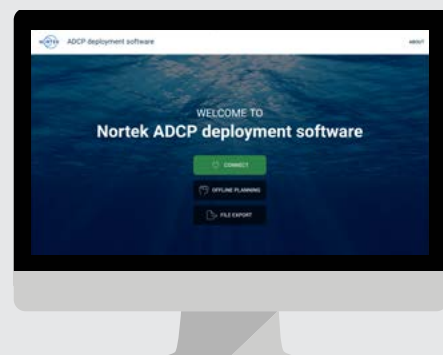

Visit this link to find the Nortek Deployment software:
<https://deployment.nortekgroup.com/>