

NORTEK MANUALS

Nortek VM Service



N3015-045 | V3.3



Contents

Ch. 1	Introduction	4
Ch. 2	Nortek VM Service	5
2.1	Installing	5
2.2	Checking or Starting the service	5
2.3	Configuring the service	6
2.3.1	Location of files	6
Ch. 3	Web Interface	8
Ch. 4	Command Line Interface - Telnet	9
4.1	Command interface	9
4.1.1	AutoStart	11
4.1.2	Deploy	11
4.1.3	Discover	12
4.1.4	Start / Stop	12
4.2	Processing and calculation settings	12
4.2.1	Output Formats	27
4.2.2	AverageInterval	27
4.2.3	Output Interval	27
	Output Interval = 0, Burst mode	27
4.2.4	'Primary' or 'Secondary channel' settings.	28
Ch. 5	Data storage	29
5.1	Limiting the amount of files	29

1 Introduction

The Nortek VM Service is a version of the software that can run unattended on a computer that has no monitor, keyboard or mouse attached. This will allow users to write their own control software and use the processed data as input to their system as if the Nortek VM-ADCP was just another sensor.

Communication to this 'black box' is done through ethernet. If a serial connection is required, this may be done through an external converter box. Using these interfaces and text-based commands it is possible to configure the system, issue start and stop commands and collect data.

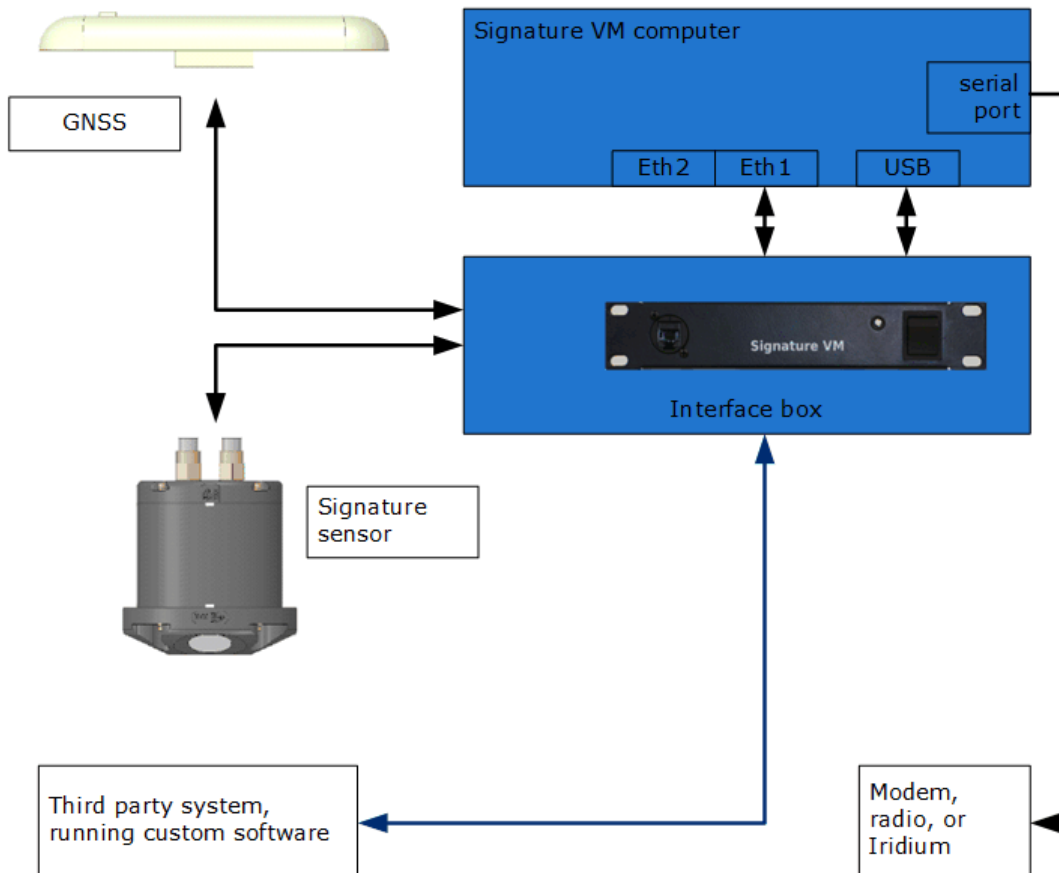


Figure 1: Nortek VM stand-alone interconnections

2 Nortek VM Service

The Nortek VM Service runs a service on Windows computers. This means it will always run in the background, unless explicitly disabled using the 'Task Manager' or from the command line. Note that this is a risk when installing this version on a desktop PC. The service will always run, hidden from the user, and if it is configured for 'AutoStart' try to connect to the nearest VM-ADCP. This might cause problems when running any other Nortek software like Signature Deploy or Midas.

When the service is started it will read its settings from the file 'SignatureVM.config', located in 'C:\Nortek\SignatureVM_Service\'. One of these settings is 'AutoStart'. If this is enabled, the service will automatically try to connect to a specified VM-ADCP and start measuring. If the connection is lost or interrupted, the service will keep retrying to connect and start the sensor.

When the system is measuring the data will be stored on a local hard disk. Data is also available in text format (NMEA style) on a different ethernet port.

2.1 Installing

The Nortek VM Service has a separate installer (see figure 2), with an option to start the service right after the installation.

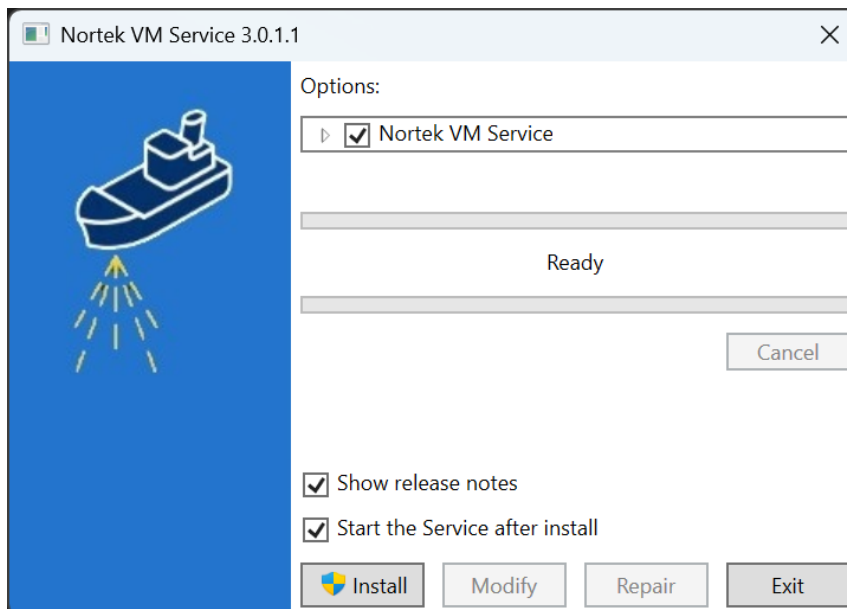


Figure 2: Nortek VM Service installer

2.2 Checking or Starting the service

When the service is installed it will be visible in the 'Services' manager. This can be checked by opening the 'Task Manager' and clicking 'Services'. Search for 'NortekVMService'. The service can now be started manually (from the right-click context menu), or you can open the Services console ("Open Services"), and set the 'Startup Type' to Automatic so it will automatically start when the computer starts up (in the Services console, search for "Nortek VM Service"). Figure 3⁶ shows the Services console.

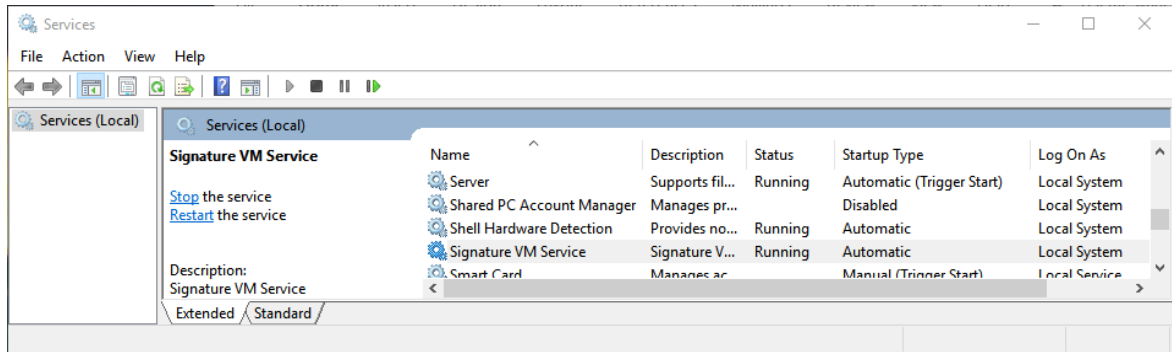


Figure 3: Services - Nortek VM Service is running

It is also possible to start or stop the service from an elevated PowerShell window by typing:

```
Start-Service NortekVMService
or
```

```
Stop-Service NortekVMService
```

The Command Prompt equivalents are 'net start NortekVMService' and 'net stop NortekVMService', or alternatively, 'sc start NortekVMService' and 'sc stop NortekVMService'. (Use an elevated command prompt, i.e., 'Run as Administrator'.)

2.3 Configuring the service

When the service is running it may be configured using the command line interface as described in section [Command Line Interface - Telnet](#)⁹. Settings are stored in the 'SignatureVM.config' file, which is in the main data folder: 'C:\Nortek\SignatureVM_Service'. It is an XML based text file which can be opened and edited using a standard text editor.

Note: If the .config file does not yet exist, create it by typing 'save' from the command line !

2.3.1 Location of files

The service itself is in :

```
C:\Program Files\Nortek\Signature.VM.Service
```

Default deployment files are in :

```
C:\Program Files\Nortek\Signature.VM.Service\Deployment
```

Configuration, data and log files:

```
C:\Nortek\SignatureVM_Service
```

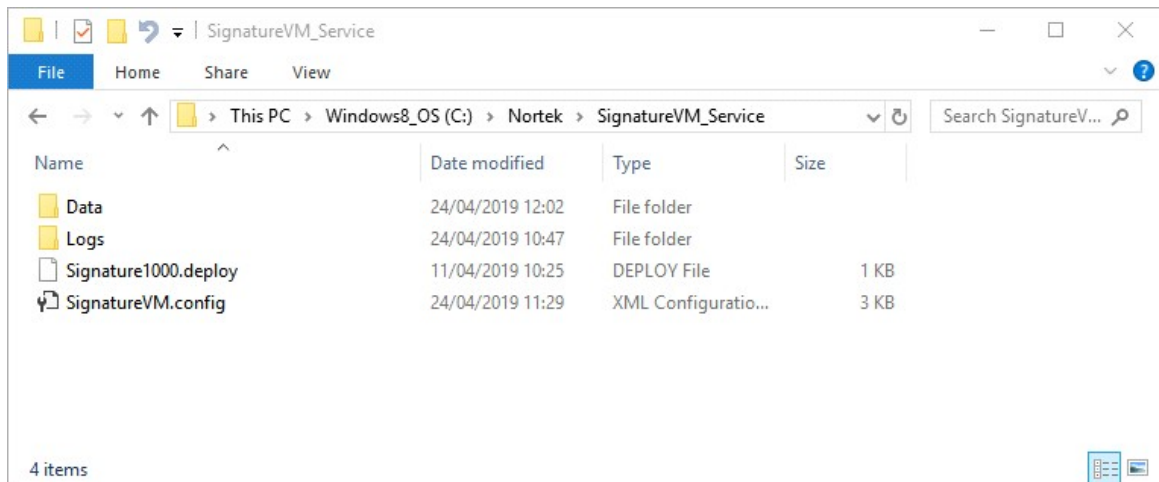


Figure 4: Deployment files in Explorer

The location of the deployment file and where the data is recorded can be changed by setting the 'deploymentfile' and 'recorderpath'. For example, by editing the .config file:

```
<DeploymentFile>  
  C:\Nortek\SignatureVM_Service\Signature1000.deploy  
</DeploymentFile>  
<RecorderPath>C:\Nortek\SignatureVM_Service\Data</RecorderPath>
```

3 Web Interface

When the service is running, there is a basic web-interface available. Open a browser and access 'localhost:80'. Figure 5 shows an example.

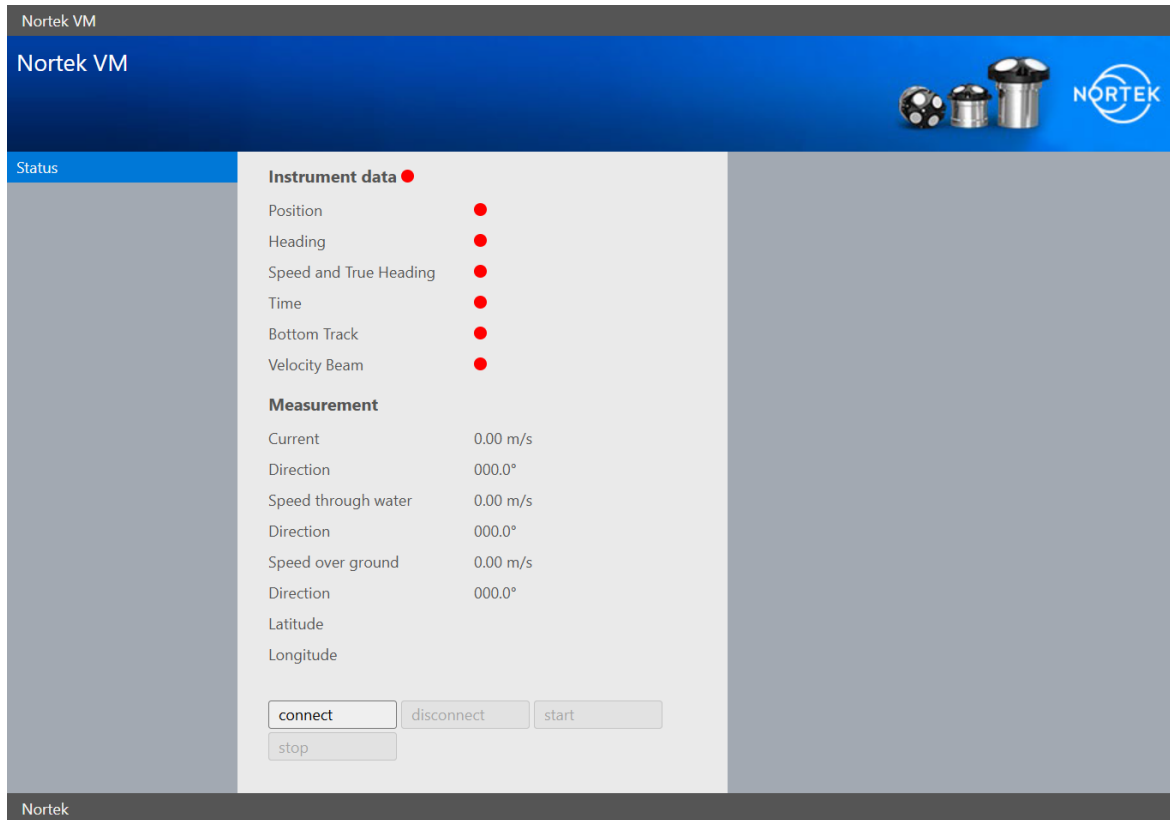


Figure 5: Nortek VM Service web interface

This only has a few basic controls, but it does allow you to see the status of the instrument and some of the key parameters.

4 Command Line Interface - Telnet

When the Nortek VM Service is running it can be controlled using the command-line interface (CLI). The CLI version of Nortek VM is based on Telnet. Telnet is a protocol used on a network to provide bidirectional communication using a virtual terminal connection. The Telnet interface is available on port 9010.

Port numbers:

9010 Telnet-protocol ASCII Command interface

9011 RESERVED

9012 NMEA style data output

Commands are ASCII based, line oriented and terminated with CR/LF. Commands are not case sensitive, so `'deploy'`, `'DEPLOY'` or `'DePloy'` are all treated the same.

4.1 Command interface


Connect to the Nortek VM Service over Ethernet using a Telnet client, like PuTTY, or the built-in client for Windows. The Telnet Client can be enabled in 'Turn Windows features on or off'. Using the `'telnet'` command, you can connect to the service using `'telnet localhost 9010'`.

After a Telnet connection is made to the Nortek VM Service it will ask for a username and password. The Username is `'nortek'` and there is no password so you can just hit enter. All commands consist of one or two words, separated by a comma or space.

A `'help'` command is available that will show all possible commands. To get help on an individual command, type `'help command'`. Note that any changes made to the settings will only be stored to the `'SignatureVM.config'` file after the `'save'` command.

A note about `'on'/'off'` values: When used on the command-line, `'on'`, `'true'`, `'T'`, and `1` are all equivalent to each other; `'off'`, `'false'`, `'F'` and `0` are all equivalent to each other. However, in the XML configuration file, use only `'true'` and `'false'`.

Table 1⁹ shows an overview of available commands.

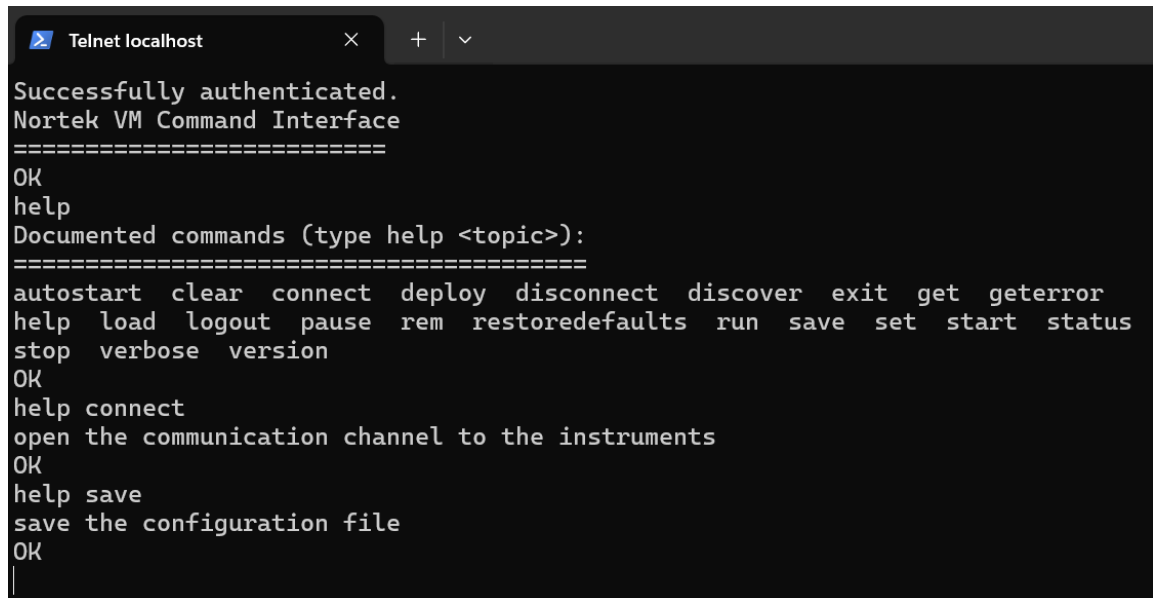

```

Telnet localhost
Successfully authenticated.
Nortek VM Command Interface
=====
OK
help
Documented commands (type help <topic>):
=====
autostart clear connect deploy disconnect discover exit get geterror
help load logout pause rem restoredefaults run save set start status
stop verbose version
OK
help connect
open the communication channel to the instruments
OK
help save
save the configuration file
OK
|

```

Figure 6: Telnet session showing the Help command

Table 1: Available commands

<i>Command</i>	<i>parameter</i>	<i>description</i>
		No parameter → shows current setting or related status
		(get / set / help: show all settings or commands)
	—	Command does not take a parameter
	<xxx>	Mandatory argument
	[xxx]	Optional argument
	—*—	Any argument is ignored
		See note (x) below for prerequisites/notes (x)
autostart	on / off	Switch the autostart task on or off. If this is 'true' the service will always try to connect to the instrument.
clear	—*—	Clears the screen
connect	—*—	Open the communication channel to the instruments
deploy	—*—	Send deployment parameters for the measurement to the VM-ADCP
disconnect	—*—	Disconnect the instruments (Close the communication channel) (2)
discover	—*—	Discover connected VM-ADCP sensors (Try to discover all available VM-ADCP sensors on this network.)
exit		Closes the Telnet session (The service will still be running.)
get		Get an environment variable (the value of a program setting)
geterror	—*—	Get the latest error message. When a command fails or an error occurs, and verbose is off, the service just returns the word 'ERROR'. Use 'geterror' to read the error message.
help		List available commands with "help" or detailed help with "help cmd".
load	[filename]	Load the 'SignatureVM.Config' configuration file (4)
logout		Closes the Telnet session (same as exit)
pause	<ms>	Pause <milliseconds>

<i>Command</i>	<i>parameter</i>	<i>description</i>
rem	—*—	Remark
restoredefaults		Restore the default settings of the service (not the VM-ADCP)
run	<script>	Run a script
save	[filename]	Save all the settings to the 'SignatureVM.config' configuration file (4)
set		Set an environment variable (the value of a program setting)
start	—*—	Starts the measurement (1)
status	—*—	Show the status of the system
stop	—*—	Stop the measurement (3)
verbose	on / off	Verbose on or off. If this is set to 'on' the messages and warnings will be displayed.
version	—*—	Show program version information

Notes:

- (1): needs a connected, deployed instrument (first use connect, then deploy)
- (2): need to stop measurement first
- (3): Note that following a stop you can immediately send a 'start'. No need to 'connect' or 'deploy' again.
- (4): default: c:\Nortek\SignatureVM_Service\SignatureVM.config
If you specify a filename, that file will be used instead. Note that you cannot specify a different directory-path, and you have to specify the file-extension, too.

4.1.1 AutoStart

This is one of the top-level settings that controls the behaviour of the service on startup. When set to 'true' the service will continuously try to connect to the specified VM-ADCP (or when not found, to the first VM-ADCP sensor available on the network), and when it is connected it will try to deploy and start. So, when an error occurs, or the instrument is temporarily disconnected the system will automatically try to reconnect and restart the measurement.

4.1.2 Deploy

Send the deployment information to the VM-ADCP. This is basically the content of the 'Signature.deploy' file and it configures things like averaging, cellsize, blanking distance etc.

If a location is specified for the deploy file (e.g. 'C:\Nortek\SignatureVM_Service\Signature1000_SpecialSettings.deploy'), this will be used. If no file is specified, the system will use the default file which is in the 'Deployment' sub-folder of the Nortek.VM.Service.exe file location.

4.1.3 Discover

When a VM-ADCP is connected for the first time to a network it will be assigned an IP address. The service will automatically scan for a sensor on start-up, but sometimes it may be useful to run the discover command manually, for example when there is more than one sensor on the network. The discover command scans the network for VM-ADCP sensors and shows their serial number and IP address.

4.1.4 Start / Stop

When the 'connect' and 'deploy' commands have completed, the instrument is ready to start measuring. If the deployment is also set for continuous measurement the 'start' and 'stop' command may be used to instantaneously start and stop measuring.

4.2 Processing and calculation settings

These variables should be changed using the 'Set' command, or you can use 'Get' to see the current value. Any changes made here will not be written to the 'SignatureVM.config' file unless you type 'save'!

All settings as described here are stored in the config file as standard XML tags with the same name.

(For on/off / true/false settings, see the remark in section [Command interface](#)⁹ .)

Example:

```
<CorrectionSource>None</CorrectionSource>
<EnableAltimeter>>true</EnableAltimeter>
```

Or with settings that have additional parameters:

```
<PrimaryChannel>
  <LinkType>UdpAn</LinkType>
  <NetworkSettings>
    <Address>239.192.1.1</Address>
    <Adapter>Ethernet</Adapter>
    <Port>9002</Port>
  </NetworkSettings>
</PrimaryChannel>
```

After changing and saving a new value, make sure you stop -> disconnect and then connect -> deploy -> start to make sure the new settings are applied.

Note that the table of settings on the next pages contains settings that have changed name and/or sub-options with respect to the older versions of the Service/CLI module. The table indicates how these settings need to be used now.

As a simple example, the old setting 'amplimit' is now called 'amplitudelimit'.

A more complicated example is the old settings 'outputformats', used to select what NMEA strings to send out. This is now a sub-option of 'output', as the number of settings and options for output has grown significantly. The new syntax for 'set outputformats' is now 'set output nmeaformat' (followed by further options).

There are a couple of settings marked 'deprecated'. Although it looks like you can still set these variables to some value, for these settings the Service/CLI interface no longer replies with the value that you tried to set it to, and you can no longer use 'get' to retrieve the current setting for these variables. But using these variables with 'set' or 'get' will not result in an error condition.

Table 2: Overview and description of options/settings and sub-settings

setting		description
options / sub-settings		
amplimit	* → amplitudelimit	
amplitudelimit	double / ""	'Remove data in processing if amplitude is less than this value' "" for none
averageinterval	int32	'Interval to calculate average velocity'
coveragelimit	double	minimum percentage of average to be good
blankingdistance	double / ""	'Blanking distance [m]' "" for none NOTE: This overrides the setting in the .deploy file.
cellsize	double / ""	'Cell Size in meters' "" for none NOTE: This overrides the setting in the .deploy file.
clocksource	<i>select one of these options:</i>	'Use this source for the clock'
	auto	* this option has been removed
	primarychannel	
	secondarychannel	
	tertiarychannel	
	tertiarychannel	
correctionsource	<i>select one of these options:</i>	'Choose source for correction of velocity value.'
	gnss	
	bottomtrackxyz	
	bottomtrackenu	
	none	
correlationlimit	double / ""	'Remove data in processing if correlation is less than this value'

setting			description
		options / sub-settings	
			"" for none
corrlimit		* → correlationlimit	
deploymentfile	string		'default Deployment file' (including path)
depthrange	double		'Range to average the velocity'
depthsource	<i>select one of these options:</i>		'Select the source for water depth '
	automatic		
	altimeter		
	bottomtrackbeamdistance		
	velocityamplitude		
	lastcell		
displayunits			[deprecated]
echosounder1calibration			'Settings factors for the echosounder channel1'
	a	double	'A from Ax^2+Bx+c ' * this option has been removed
	b	double	'B from Ax^2+Bx+c ' * this option has been removed
	c	double	'C from Ax^2+Bx+c ' * this option has been removed
	noiselevel	double	'The noise level is affected by instrument-generated electronic noise (thermal noise) and environmental noise in the measured frequency range Minimum noise level, cells with lower amplitude will be filtered out Leave blank for default.' "" for none
	units	<i>select one of these options:</i>	'Change units to sediment concentration when volume backscattering is converted using the above constants.'

setting			description
		options / sub-settings	
			[deprecated]
	db		decibels [dB] [deprecated]
	kgm3		kilogram per cubic meter [kg/m ³] [deprecated]
echosounder2calibration	[see echosounder1calibration for options and sub-settings]		Settings factors for the echosounder channel2'
echosounder3calibration	[see echosounder1calibration for options and sub-settings]		Settings factors for the echosounder channel3' <i>Note: the third echosounder channel is for experimental purposes only.</i>
enablealtimeter	on / off		'Enable Altimeter'
enablebottomtrack	on / off		'Disable the bottom track when the bottom is out of range or to increase the velocity ping rate'
enablebroadband	on / off		'Enable BroadBand'
fomthreshold	double / ""		'Remove data in processing if FOM is more than this value Leave blank for default (1000)' "" for none
frequency	<i>select one of these options:</i>		'Frequency'
	f0		
	f55		
	f75		
	f100		
	f250		
	f333		
	f500		
	f1000		
gnssmounting			'GNSS mounting offset and orientation'

setting				description
		options / sub-settings		
x		double		'X offset'
y		double		'Y offset'
z		double		'Z offset'
orientation		double		'Orientation angle, relative to the bow'
headingsource				'Use this source for heading'
	source	<i>select one of these options:</i>		'Primary channel'
		primarychannel		
		secondarychannel		
		tertiarychannel		
	headingtype	<i>select one of these options:</i>		'Heading type'
		avd		
		hdt		
		ths		
		nthpr		
instrumentinterfa ce				'Instrument settings'
	instrumentlocatio n	<i>select one of these options:</i>		'InstrumentLocation'
		none		
		local		
		remote		
	speedlogtypesetti ngs	* remotetypesettings →		(renamed)
	remotetypesetting s			'Remote Settings'
	deviceid	string		'DeviceID'

<i>setting</i>				<i>description</i>
		<i>options / sub-settings</i>		
	address		string	'IP Adress'
	adapter		string	'Network Adapter'
	port		int32	'UDP Port'
	signaturetypesettings			'VM-ADCP Settings'
	address		string	'IP Address' [or serial nr]
	useptp		* → timesynctype ptp	
	timesynctype		<i>select one of these options:</i>	'Select the type of clock source used to synchronize the VM-ADCP'
		none		
		ptp		
		ntp		
	ntpserveraddress		string	'IP address of the NTP server'
	dataformatbottomtrack21		on / off	'Output DF21 Bottomtrack Dataformat The data will be sent on the VM-ADCP's serial output at 115.2 KBaud.'
	dataformatwatertrack22		on / off	'Output DF22 Watertrack Dataformat The data will be sent on the VM-ADCP's serial output at 115.2 KBaud.'
	ahrsfaststartup		on / off	'When a VM-ADCP is powered up on a fast moving platform the internal AHRS can fail to initialize properly. Selecting "Fast startup" can resolve this.'
	internalrecording		on / off	'Enable Recording on the VM-ADCP's internal disk'
	longrange		on / off	'Long Range'
	magneticdeviation			[deprecated]
	maxdepth		double	'Maximum depth'
	maxrecordinglength		string	'Max recording length, leave blank for infinite or dd.hh:mm:ss'

setting			description
		options / sub-settings	
mindepth		double	'Minimum depth'
navigationsource		<i>select one of these options:</i>	'Use this source for navigation'
	primarychannel		
	secondarychannel		
			tertiarychannel
nmeaoutputmaxcells		* → output nmeaformat maxcells	
nmeasource		* → headingsource source / navigationsource / speedovergroundsource	
notequalifiers			[deprecated]
numoutputchannels		int	
output(n)			'Data Output channel' n is a number up to 3
	device	<i>select one of these options:</i>	[deprecated; use output link device (option)]
	none		
	serial		
	udp		
	file		
	format	<i>select one of these options:</i>	'Format'
	none		
	nmea		
	ad2cp		
	link		'Link'
	device	<i>select one of these options:</i>	'Device for output'

setting					description
			options / sub-settings		
			none		
			serial		
			udp		
			file		
		serialsettings			'SerialSettings'
		port	string		'Port'
		baudrate	int32		'Baud rate'
		parity	<i>select one of these options:</i>		'Parity'
			none		
			odd		
			even		
			mark		
			space		
		databits	int32		'Data bits'
		stopbits	<i>select one of these options:</i>		'Stop bits'
			none		
			one		
			two		
			onepointfive		
		handshake	<i>select one of these options:</i>		'Handshake'
			none		
			xonxoff		
			requesttosend		
			requesttosendxonxoff		

setting				description
		options / sub-settings		
		networksettings		'NetworkSettings'
		deviceid	string	'DeviceID'
		address	string	'IP Address'
		adapter	string	'Network Adapter'
		port	int32	'UDP Port'
		filesettings		'FileSettings'
		nameorpath	string	'File Name or Path'
		autoname	on / off	'AutoName'
		append	on / off	'Append'
		nmeaformat		'Output strings for NMEA Formats may be combined.'
		Timetags	on / off	'Add IEC 61162-450 Time tags'
		maxcells	int32 / ""	'Maximum number of cell to output' "" for none If set to 0 this is always the maximum number of cells.'
		nmeacompliant	on / off	'Output IEC 61162-1 compliant NMEA. The Nortek proprietary NMEA messages will be sent with: Checked a \$PNRT prefix (IEC 61162-1 compliant) Unchecked a \$PNOR prefix (for legacy systems)'
		i1	on / off	'Output on NMEA I1'
		s1	on / off	'Output on NMEA S1'
		cv	on / off	'Output on NMEA CV'
		c1	on / off	'Output on NMEA C1'
		bt4	on / off	'Output on NMEA BT4'
		qa	on / off	'Output on NMEA QA'

setting				description
		options / sub-settings		
	vl		on / off	'Output on NMEA VL'
	sdgga		on / off	'Output on NMEA \$SDGGA'
	sdvtg		on / off	'Output on NMEA \$SDVTG'
	sddbdt		on / off	'Output on NMEA \$SDNDBT'
	vdvdr		on / off	'Output on NMEA \$VDVDR'
	vdvhw		on / off	'Output on NMEA \$VDVHW'
	vdvbw		on / off	'Output on NMEA \$VDVBW'
	primarynmea		on / off	'Forwarded Primary NMEA Channel'
	secondarynmea		on / off	'Forwarded Secondary NMEA Channel'
	interval	int32		'Interval in milliseconds for output messages '
outputchannel		* → output link device		
outputformats		* → output nmeaformat		
outputinterval		* → output interval		
pitchandrollsource		<i>select one of these options:</i>		'Use pitch and roll from this source'
	internal			
	primarychannel			
	secondarychannel			
	tertiarychannel			
pitchoffset				[deprecated]
primarychannel				'Primary Channel settings'
	linktype		<i>select one of these options:</i>	'LinkType'
	none			
	serial			
	udp			

setting				description
		options / sub-settings		
		udpan		
		serialsettings		'SerialSettings'
		port	string	'Port'
		baudrate	int32	'Baud rate'
		parity	<i>select one of these options:</i>	'Parity'
			none	
			odd	
			even	
			mark	
			space	
		databits	int32	'Data bits'
		stopbits	<i>select one of these options:</i>	'Stop bits'
			none	
			one	
			two	
			onepointfive	
		handshake	<i>select one of these options:</i>	'Handshake'
			none	
			xonxoff	
			requesttosend	
			requesttosendxonxoff	
		networksettings		'NetworkSettings'
		deviceid	string	'DeviceID'
		address	string	'IP Address'

setting				description
		options / sub-settings		
	adapter		string	'Network Adapter'
	port		int32	'UDP Port'
recorderpath		string		'Location To save recorded files; when blank, default location'
rolloffset				[deprecated]
salinity		double / ""		'Salinity in ppt (parts per thousand), affects echosounder amplitude'
secondarychannel		[see primarychannel for options and sub-settings]		'Secondary Channel settings'
tertiarychannel		[see primarychannel for options and sub-settings]		'Tertiary Channel settings'
sensortimeout		double / ""		'Time interval of bottom track or velocity ping Leave blank for instrument default' "" for none
signature		* → instrumentinterface signaturetypesettings		
signaturemounting				'VM-ADCP mounting offset and orientation'
	x		double	'X offset'
	y		double	'Y offset'
	z		double	'Z offset'
	orientation		double	'Orientation angle, relative to the bow'
soundvelocity		double / ""		'Sound Velocity [m/s]' "" for none
speedoverground source		select one of these options:		'Use this source for speed over ground'
	primarychannel			
	secondarychannel			
	tertiarychannel			

setting				description
		options / sub-settings		
trigger		* → triggersettings signaturetriggersetting s		
triggersettings				'Configures the instrument for triggering'
	triggertype	<i>select one of these options:</i>		'Trigger type'
		none		
		signature		
		serial		
		udp		
		hardware		
	serialsettings			'Serial settings'
	port	string		'Port'
	baudrate	int32		'Baud rate'
	parity	<i>select one of these options:</i>		'Parity'
		none		
		odd		
		even		
		mark		
		space		
	databits	int32		'Data bits'
	stopbits	<i>select one of these options:</i>		'Stop bits'
		none		
		one		
		two		
		onepointfive		

setting				description
		options / sub-settings		
	handshake	<i>select one of these options:</i>		'Handshake'
	none			
	xonxoff			
	requesttosend			
	requesttosendxonxoff			
networksettings				'Network settings'
	deviceid	string		'DeviceID'
	address	string		'IP Address'
	adapter	string		'Network Adapter'
	port	int32		'UDP Port'
hardwaresettings				'Hardware settings'
	port	string		'Port'
	triggerlevel	<i>select one of these options:</i>		'Trigger Level'
	low			
	high			
	busylevel	<i>select one of these options:</i>		'Busy Level'
	low			
	high			
	readylevel	<i>select one of these options:</i>		' Ready Level' * this option has been removed
	low			
	high			
signaturetriggersettings				'VM-ADCP trigger settings'
	mode	<i>select one of these options:</i>		'Mode'

setting				description
		options / sub-settings		
			disabled	
			slave	
			master	
		option	<i>select one of these options:</i>	'Select the type of trigger'
			command	
			rs485edge	
			rs485rise	
			rs485fall	
useburst			on / off	'Provides better accuracy or resolution in time or space, reduced depth range'
usedepthrange			on / off	'If true, the Maximum Depth is not in depth units but in fraction of actual depth (0-1)'
usenmeaoutputchannel			* → output format nmea	
useoutputchannel			on / off	'Use Output channel'
usesecondarychannel			on / off	'enables an additional input for navigation data'
usesensorheading				[deprecated]
usesoundvelocity			on / off	'Select salinity or speed of sound'
velocitycorrection			double / ""	'Velocity correction for Bottom-Track' "" for none
waterline			double	Vertical distance between current water line and reference point (equal to VM-ADCP mounting depth when VM-ADCP is at (0, 0, 0))
Don't forget to type 'SAVE' after setting a new value !				

4.2.1 Output Formats

Several NMEA based output formats are available. For a detailed description refer to the Nortek VM Acquisition Software Manual.

Please note that as of release 2.6, by default the NMEA messages are sent with the \$PNRT prefix; these messages are compliant with the NMEA IEC61162-1 standard. For compatibility with existing equipment that uses the nonstandard \$PNOR messages the output format can be changed using the nmeacompliant option. The difference is only in the prefix, otherwise the message details are the same. (However, the checksum will be different, due to the difference between NRT and NOR.)

Note that "NOR" is not our officially registered manufacturer's mnemonic code, but has been used historically.

To enable a specific format, use the 'set output nmeaformat <format> on' command.

Example:

```
set output nmeaformat sdvtdg on
OK
```

In the .config file:

```
<Output>
  <NMEAFormat>
    <CV>true</CV>
    <VDVDR>true</VDVDR>
    <SDVTG>true</SDVTG>
  </NMEAFormat>
</Output>
```

Formats like CV and C1 are used to output data for each individual cell. By default, this outputs data for all available cells, which might be more than needed. Use 'set output nmeaformat maxcells' to limit this to the number of cells required.

4.2.2 AverageInterval

The 'averageinterval' is specified in milliseconds and sets the time over which the measurements are averaged when data is displayed or sent to an output.

If the AverageInterval is set to 30000 (30 seconds) and an NMEA message is created, the data in the NMEA message is the average of all data from this moment up to 30 seconds in the past.

4.2.3 Output Interval

Interval in milliseconds for output messages. If this is greater than 0, output message(s) as specified in 'output nmeaformat' will be transmitted on the selected channel every nnnn milliseconds. The data in this message will be the average over the last 'averageinterval' milliseconds.

4.2.3.1 Output Interval = 0, Burst mode

If it is set to 0, the output will be generated at the end of the Burst interval. This requires that the VM-ADCP is configured for a specific burst period that is shorter than the measurement interval, which can be specified in a custom '.deploy' file.

For example:

```
SETPLAN, MIAVG=1, AVG=0, MIBURST=60, BURST=1, FN="SurveyVM.ad2cp", FREQ=500
SETBURST, NC=120, NB=4, CS=0.5, BD=0.5, VR=5, CY="BEAM", SR=8, DF=3, VR5=5, NS=80, BT=1
```

Here the burst interval is set to 60 seconds (MIBURST=60), the sample rate is set to 8 (SR=8) and the number of samples per burst is 80 (NS=80) so the burst length is 10 seconds (80 samples at 8 samples per second). The instrument will now only be measuring

10 seconds every 60 seconds. And if the 'output interval' is set to 0, the data will be transmitted at the end of the 10 seconds burst. If the 'averageinterval' time is now set equal to the burst length, this will be the averaged data over the full burst.

4.2.4 'Primary' or 'Secondary channel' settings.

These settings refer to the communication channel used for reading the GNSS or GPS receiver. Theoretically there can be two GNSS or GPS receivers connected to the system where the first system provides for example just position and time information and a second system only has heading information. If the 'usesecondarychannel' setting is now set to true, the information from both channels will be used. Note that this might cause problems if the systems both output time information and are not exactly synchronized.

Each channel has its own options for the actual communication as used.

'Linktype' – This can be 'serial' for NMEA formatted data over a standard RS232 or RS422 serial port, 'Udp' which accepts standard NMEA messages over UDP, or it can be 'UdpAn' which refers to the UDP channel on the Advanced Navigation GNSS compass and so will only accept the 'anpp' binary format.

Example:

```
Set secondarychannel linktype serial
OK
```

Depending on the 'linktype' the settings for this specific link must be specified.

If linktype is 'serial' it will need 'SerialSettings', which contains 'Port', 'BaudRate', 'Parity', 'DataBits' 'StopBits' and 'HandShake'. Note that if all these must be set using the console, each setting needs to be specified in full, like shown here for setting the COM port:

```
Set PrimaryChannel SerialSettings Port COM1
OK

Set PrimaryChannel SerialSettings Baudrate 9600
OK
```

If 'linktype' is Udp or UdpAn the 'networksettings' must be set, which consist of 'Address' (the IP address), 'Adapter' (the name of the network adapter) and 'Port' (network port number)

Example in the .config file:

```
<PrimaryChannel>
  <LinkType>UdpAn</LinkType>
  <NetworkSettings>
    <Address>239.192.1.1</Address>
    <Adapter>Ethernet</Adapter>
    <Port>9002</Port>
  </NetworkSettings>
</PrimaryChannel>
```

5 Data storage

Data is stored on the Nortek VM PC in the directory as specified in the 'RecorderPath' setting, which is by default: 'C:\Nortek\SignatureVM_Service\Data'. There is no command line option to retrieve this data. So if this is required it may be convenient to install an FTP server (like 'FileZilla Server' - <https://filezilla-project.org/>) on the computer which can be used to transfer the files.

5.1 Limiting the amount of files

If the system is used on an autonomous system with limited hard disk capacity it is best to limit the number of stored files, since a full harddisk could possibly crash the system.

The easiest way to do this is by using an automated task as controlled by Windows Task Scheduler. To set this up, press the Windows key, and type 'task scheduler'. In the Task Scheduler window, select 'Task Scheduler Library' in the left pane (see figure 7).

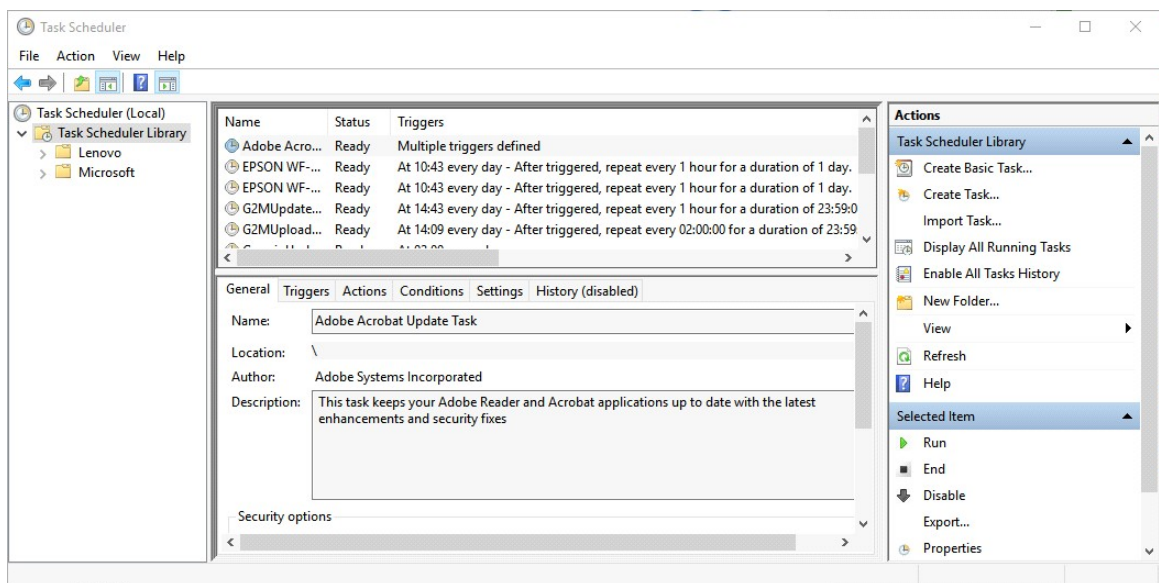


Figure 7: Task Scheduler window

Now click 'Import Task' and find the file 'DeleteOldVMRecordings.xml' (This should be in 'C:\Program Files\Nortek\Signature.VM.Service') . An automatic task will be imported that erases all files older than 30 days from the folder 'C:\Nortek\SignatureVM_Service\Data'. If you have selected another folder for data-storage this should obviously be changed as well.

Figures

Figure 1: Nortek VM stand-alone interconnections	4
Figure 2: Nortek VM Service installer	5
Figure 3: Services - Nortek VM Service is running	6
Figure 4: Deployment files in Explorer	7
Figure 5: Nortek VM Service web interface	8
Figure 6: Telnet session showing the Help command	9
Figure 7: Task Scheduler window	29

Tables

Table 1: Available commands	9
Table 2: Overview and description of options/settings and sub-settings	13